


# Quick Guide

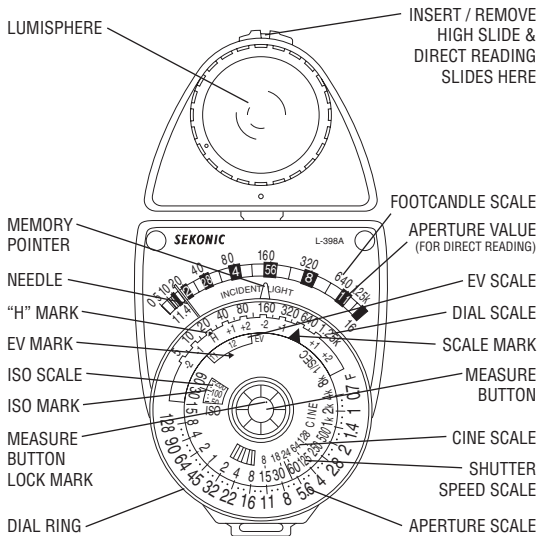

## Set ISO

Turn inner dial until desired ISO appears next to ISO mark in window.

## Measure

Press MEASURE button. Meter needle will move on footcandle scale. Release. Needle will stop in position over footcandle scale.

Turn DIAL RING so that same value from footcandle scale aligns with SCALE MARK (black triangle). Read f-stop/shutter speed combinations from outer ring of dial and set camera accordingly.

NOTE: If needle moves past far right of scale, insert HIGH SLIDE into top of meter, and set footcandle value on dial by "H" MARK.

## Compare Readings

Take measurement and rotate MEMORY POINTER to rest over needle. Take second reading and compare.

## Constant Reading

While pressing MEASURE button, turn button clockwise until MEASURE BUTTON LOCK MARK is at 3:00 position. Turn counter-clockwise to unlock.

## EV

After following measure directions above, refer to EV window for EV value of reading.

## CINE speeds

After following measure directions above, refer to CINE scale above shutter speeds.