

# *H4next* *Handy Recorder*

## OPERATION MANUAL

**ZOOM**

© ZOOM Corporation


## 5-1 Insert a SD card

The SD card is required to record. Make sure to turn off power before inserting or removing the SD card.

### [How to install the SD card]

**1** Make sure power is off.


**2** Insert the SD card into the slot.

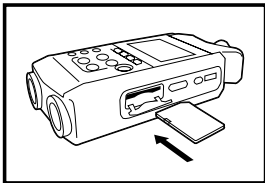

### [How to remove the SD card]

**1** Make sure power is off.

**2** Push the SD card in to remove it from the slot.

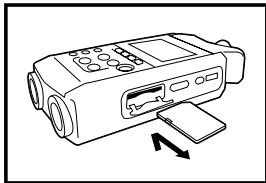

### SD card capacity time to record (approx.)

4GB SDHC card	Recording time
WAV 44.1 kHz/16 bits (measured in terms of stereo track)	approx. 380 minutes
MP3 44.1 kHz/128 kbps (measured in terms of stereo track)	approx. 68 hours


### NOTE:

#### POWER OFF !


Never insert or remove the SD card while the power is on. This may destroy the data.

#### CAUTIONS WHEN INSERTING SD CARD

- You can use 16MB to 32GB SD cards. For a list of operation certified SD cards please refer to ZOOM's website: <http://www.zoom.co.jp/>
- When you use the SD card for your computer, digital camera or other machine, formatting in the H4n is required.
- When "No Card" is seen on the display at boot-up, check if the SD card is correctly inserted.
- When "Format Card" is seen on the display at booting-up, this means the SD card has not been formatted in the H4n. To format, press [DIAL] down and select OK button.
- When the booting-up screen says "Card Protect", the card is covered with OVERWRITE PROTECT. To release this protect slide the lock switch of the SD card.

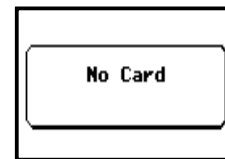

"Warning" no SD card in when booting - up.

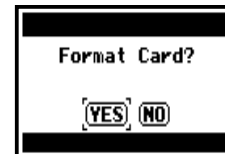


This "Warning" will show when an SD card is not in a recognized format. Select <YES> to format card and all of the data will be deleted.

### 3 Battery/Power setting

Power for H4n recorder is supplied by the included AC adapter or batteries.

#### • AC power operation

An AC adapter is included.


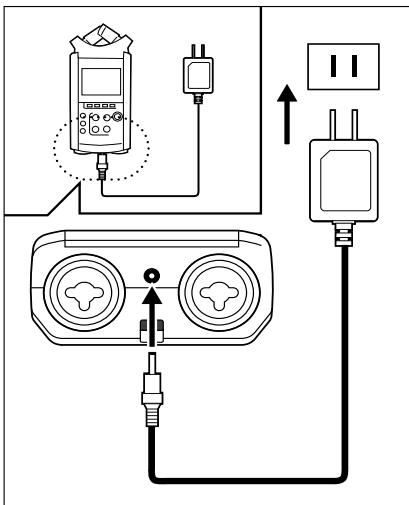


An attached AC adapter  
Zoom AD-14

Use of an AC adapter other than the one included may cause trouble.

#### • Battery installation

Install two size AA batteries (IEC R6)

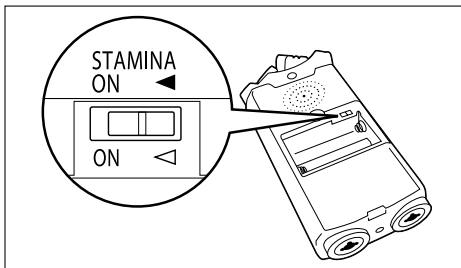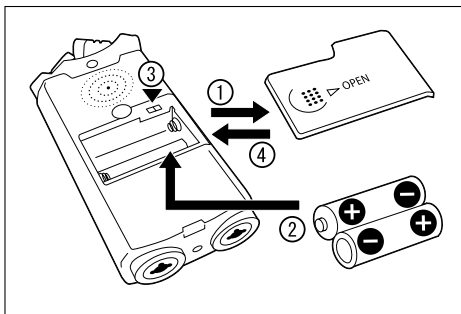

#### 1 Open the battery compartment cover.

#### NOTE:

##### Make sure the power is off!

Whenever you open the battery compartment cover or plug in/unplug the AC adapter, make sure the power is off, otherwise the recording data can be destroyed.

#### 2 Insert two size AA batteries ensuring you match the polarity markings ( + and - ).

\* Illustration : open the battery compartment cover and insert batteries.

#### 3 Set the Stamina Mode Switch.

\* Illustration of a Stamina Switch on.

◀ : Use in general (Using AC adapter, batteries)

ON: Stamina Mode On (Eco-power mode when using batteries)

#### 4 Close the battery compartment cover.

\* Illustration of closing the battery compartment cover.

Ref. ⓘ Explanation about the Stamina Mode. P.037

• **Battery's approximate lifetime**

Alkaline battery	in general use	about 6 hours
	in stamina mode use	about 11 hours

\* Approximate lifetime when it is used for continuous recording on WAV 44.1 kHz/16bit format.

• **Remaining lifetime of the battery**

When “Low Battery!” indication appears, immediately switch off unit and exchange batteries, or shift power source to AC adapter.

When remaining battery life is getting short, “Low Battery” indication will be shown every two seconds and the power will switch off shortly after.

**NOTE:**

**Usable batteries**

You can use conventional alkaline and nickel metal hydride batteries.

**Power supply from USB**

Connect the USB cable to the H4n while it's already connected to the computer with the power switch off, and power is automatically turned on via USB bus power supply. This function is only available when the H4n is used as an SD card reader or an audio interface.

**HINT:**

**To measure the lifetime of the battery**

The remaining lifetime of the battery is measured more precisely by using the battery type setting on the H4n.

**Saving period for the setting <DATE/TIME>**

Whenever power supply is off by dead battery, the H4n can save the date/time setting for three minutes. When the saving time is over, the setting will be returned to the default value.

**Screen indicator for power**



Using batteries

Using AC adapter

Ref. <USB BUS POWER> **P.033**  
 Ref. <BATTERY TYPE> **P.128**

# 2-1 Name and function of each part

[FRONT PANEL]

90 / 120°  
Variable XY  
Stereo microphones  
(Built-in)

STEREO/4CH/MTR  
mode indicator

Backlight Equipped  
Display


- Short cut buttons on STEREO/4CH mode
  - [1] <FOLDER>
  - [2] <FILE>
  - [3] <SPEED>\*STEREO mode
  - [4] <WAV/MP3>
  - \*STEREO/4CH mode

- On MTR mode  
Buttons for  
TRACK [1], [2], [3], [4]

INPUT: Buttons for  
[MIC] [1], [2]

Transport Control Buttons

[REC] Button

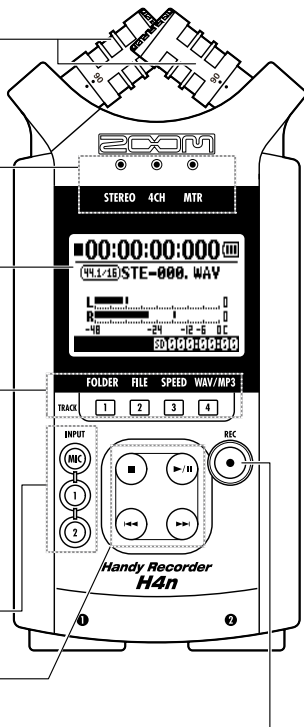

[BACK PANEL]


Input jacks for external stereo  
microphone

A built-in mono speaker


Threaded Tripod mount

Battery cover


STAMINA mode  
switch

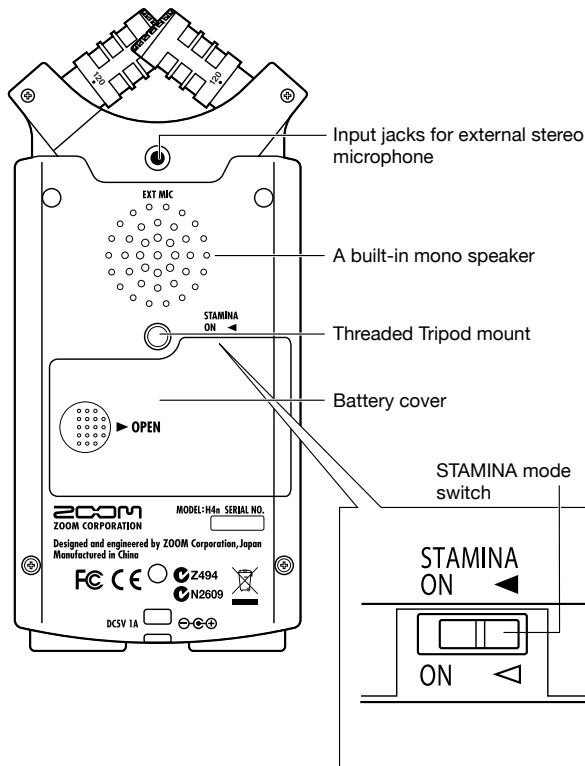


**[RIGHT PANEL]**

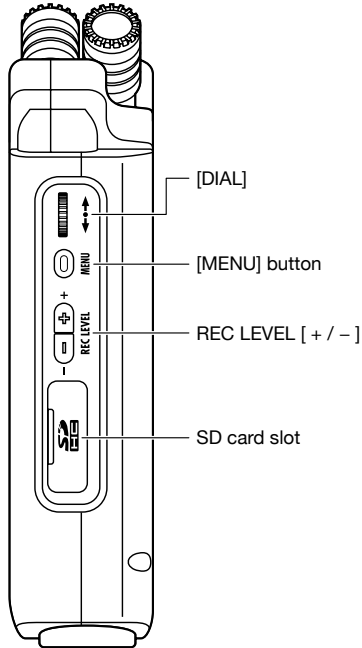

**[LEFT PANEL]**

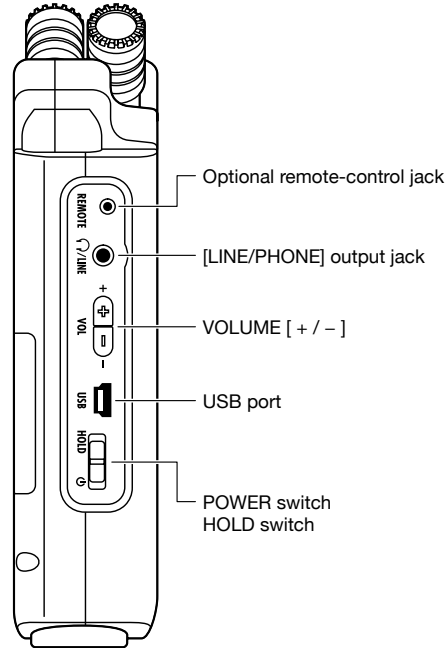

**[BOTTOM PANEL]**

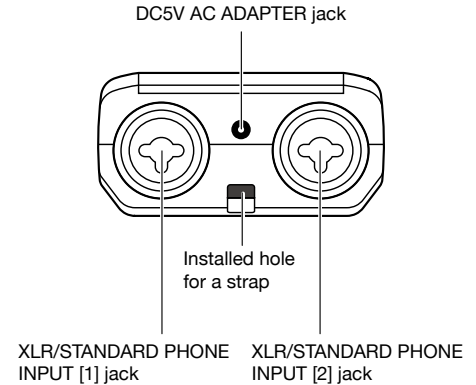


## 2-2 Included Accessories

The following accessories are included in the H4n package.  
Inspect the package contents to be sure all accessories are included.

**SD CARD**




**WINDSHIELD**

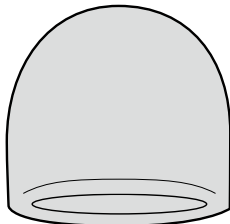

**MICROPHONE STAND  
ADAPTER**




**AC ADAPTER  
(ZOOM AD-14)**

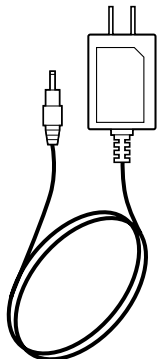

**USB CABLE**



**MAIN BODY CASE**

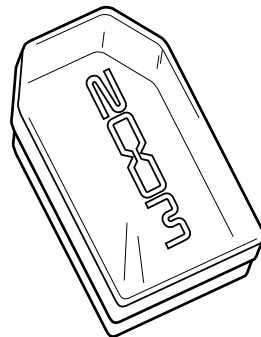


Instruction manual

DAW start-up guide


Cubase LE4

•How to use the windshield

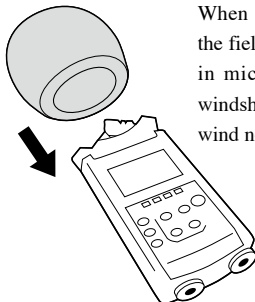



When recording outside in the field, covering the built-in microphones with this windshield, you can reduce wind noise.

•How to mount to a microphone stand

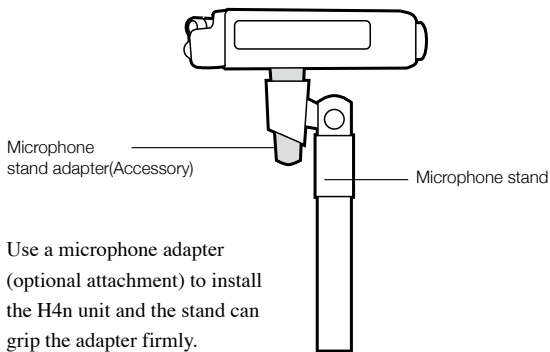

Use a microphone adapter (optional attachment) to install the H4n unit and the stand can grip the adapter firmly.

Remote control  
(Option, sold separately)

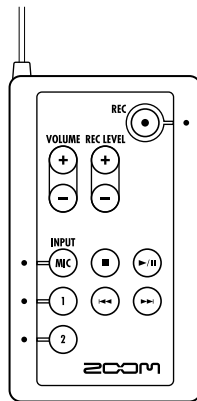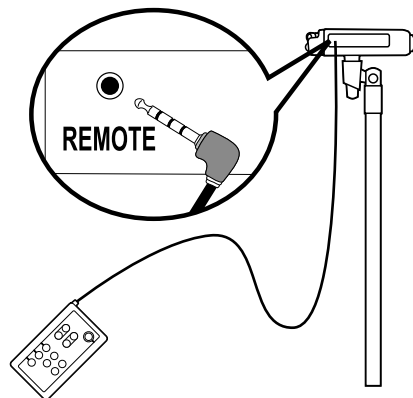

[FRONT PANEL]



[SIDE PANEL]


Operation of remote control >>>>

P.045




# 4-1 Power On and Off, How to use power and hold switch

[LEFT PANEL]

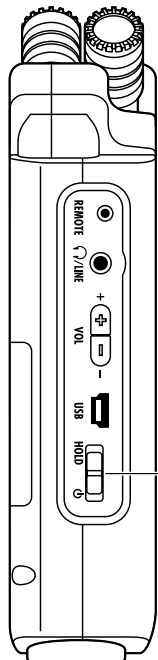

POWER switch  
HOLD switch

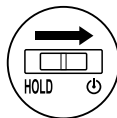

## POWER ON / BOOTING UP

**1 [Preparation]**  
Make sure all equipment is turned off.

**2** Insert SD card.


**3 [Power On \_ Boot up]**  
Slide the power switch.



**4** Switch on connected instruments and monitors.

### NOTE

- Before switching the power on, lower the volume of instruments and monitors connected to the H4n.
- If the display reads "No Card" when booting up, make sure that the SD card is inserted correctly.
- If the display says "Reset DATE/TIME" when booting up, the date and time are set to the primary value.

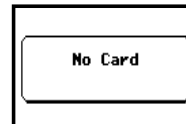

Ref. **P.028**  
<DATA/TIME>


### HINT: Procedure for power on.

When using additional audio devices, power them on in the following order:



## POWER OFF / SHUT DOWN

- [Preparation]**  
Turn off monitors first then instruments

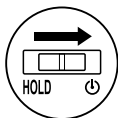


- [Power Off \_ Shut down]**  
Slide the power switch.



\* shut down screen


### HINT Procedure for power off

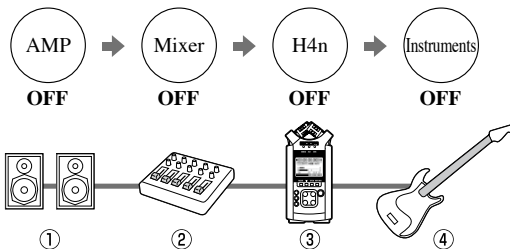

### HOLD Function

The H4n features a HOLD function to make any button operation inactive, preventing errors during recording.

To engage the hold function, slide switch to hold position.

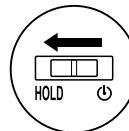

\* 'Key Hold' display


If you press any button while the HOLD function is engaged, the screen will display "Key Hold" for two seconds. To disengage the HOLD mode, slide power switch out of hold position.

## 4-6 How to use [DIAL] and [MENU] buttons

[DIAL] and [MENU] buttons are used for various settings while recording and during playback.

Here are some basic explanations about each operation.

### [RIGHT PANEL]

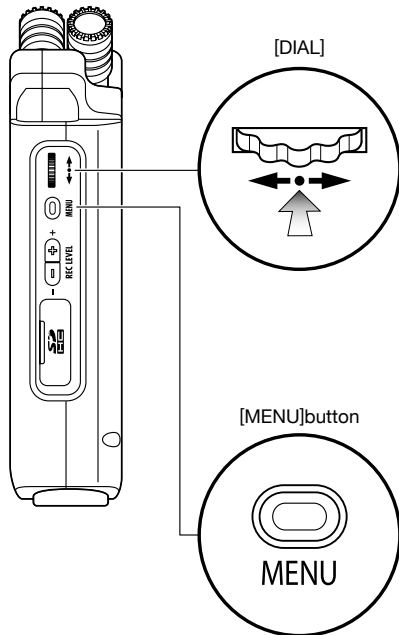

### The basic operation for [DIAL]



#### Rotate the [DIAL] = select an item

Rotate the [DIAL], and the cursor on the display will move along the [DIAL]

#### Select



#### Press in the [DIAL] = confirm the selection


Press down [DIAL], your selection is confirmed.

→ for additional selections, move on to the next screen.

→ When you complete selections, the screen returns back to the previous one.

#### Press

### The basic operation for [MENU] button

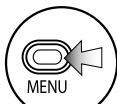

#### Calling [MENU] screen

When setting recording or playback method, Press [MENU] button at the top screen of each mode.

#### Select

#### Canceling the setting



If you press the [MENU] button during any setting operation, its operation will be canceled and the screen returns back to the previous one.



To cancel setting operation and to return back to the top screen of the each mode, press [MENU] button for more than 2 seconds.

#### Long Press

The operation when [ ] cursor is on display (Date-Time Setting, Changing File Name Directory, etc)



When you rotate the [DIAL], [ ] moves accordingly.

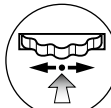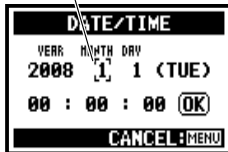


Pressing [DIAL] in, change the numbers and letters.



The item letters or numbers are reversed → Rotate [DIAL] to change the numbers and letters → Press [DIAL] down to confirm your selection.

[DIAL] operation on the top screen

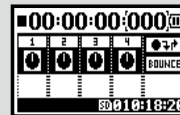

Moving [DIAL] on the top screen, 'cursor' moves. Pressing (highlight) [ ] selects 'COUNTER' to enable adjustment or calls up the setting menu.

\* Available only on MTR mode.


The operation when the selections are listed on screen



By rotating the [DIAL], the selection lists will move accordingly.



Push [DIAL] in, to confirm your selection.

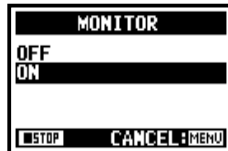

the screen returns back to the previous one.



About the '□' on the selection lists



When you see this display, there are more selections on the next screen. Highlight arrow and press [DIAL] in to move on to the next screen.